



## SepraSol™ Liquid/Gas Coalescer

**Provides Liquid and  
Solid Free Gas**

### **The Answer to Gas Filtration Applications**

Clean, aerosol free gas is critical to equipment reliability and optimized operations in the refinery and chemical industries. Pall's SepraSol™ liquid/gas coalescers provide high-efficiency liquid and solid removal from contaminated gases reducing maintenance and operating costs. A patented chemical surface treatment enhances the coalescer drainage properties leading to improved performance allowing for smaller systems, lower pressure drop, and improved ability to recover from liquid slugs.

Pall's high-efficiency SepraSol coalescer is recommended for a wide range of gas filtration applications, including:

- Protecting compressors and turbines
- Protecting low and ultra-low NOx burners by cleaning fuel gas
- Removing lubrication oil, water, compressor wear products, corrosion products, and other solids from effluent gas streams
- Minimizing foaming tendencies in sweetening and dehydration units
- Minimizing amine and glycol losses downstream of gas sweetening and dehydration units
- Cleaning dirty fuel gas and instrument gas
- Controlling injection well plugging during gas flooding
- Protecting catalysts, desiccants and absorbants
- Removing lube oil from ammonia gas



### **Coalescer Technical Information**

#### **Oleophobic/Hydrophobic Treatment –**

All of Pall's SepraSol liquid/gas coalescers receive a patented oleophobic/hydrophobic treatment. Chemically treating the coalescer lowers the surface energy of the medium and promotes rapid drainage of the coalesced liquids. Benefits of the surface treatment include increased capacity for liquid challenges, smaller overall assembly sizes, lower pressure drop, and improved ability to recover from liquid slugs.

## Features, Advantages and Benefits of the Pall SepraSol Liquid/Gas Coalescer

Pall's SepraSol liquid/gas coalescers eliminate virtually all solids and liquids in a gas stream. Downstream liquid levels are as low as 0.003 ppmw<sup>1</sup> and the solids removal rating is 0.3 micron (µm) (99.99% efficiency).<sup>2</sup>


Features	Advantages	Benefits
Patented Oleophobic/Hydrophobic Media Treatment	<ul style="list-style-type: none"> <li>• More rapid liquid drainage</li> <li>• Lower saturated pressure drop</li> <li>• Faster recovery from liquid slugs</li> <li>• Minimized vessel diameter due to less restrictions on annular velocity</li> </ul>	<ul style="list-style-type: none"> <li>• Reduced capital and operating cost</li> <li>• Improved product quality and consistency</li> </ul>
High Effective Filtration Area	<ul style="list-style-type: none"> <li>• Fewer element changeouts needed</li> <li>• High solids removal efficiency</li> </ul>	<ul style="list-style-type: none"> <li>• Lower operating and maintenance costs</li> </ul>
High-efficiency Media and Draining Materials	<ul style="list-style-type: none"> <li>• Consistent high-efficiency liquid removal</li> <li>• Reduced liquid losses</li> <li>• Optimum protection of downstream equipment</li> </ul>	<ul style="list-style-type: none"> <li>• Lower maintenance costs and improved availability</li> </ul>

<sup>1</sup> Test conditions used to measure efficiency area as follows:  
Flow rate: 900 SCF/minute per 30 in. element at 37.8°C (100°F) and 6.9 bar (100 psig)  
Liquid inlet: 50 ppmw oil

<sup>2</sup> Per sodium chloride test

## Additional Features of the Pall SepraSol Liquid/Gas Coalescing Filter

Pall coalescing filter cartridges operate economically with high separation efficiency and long life.

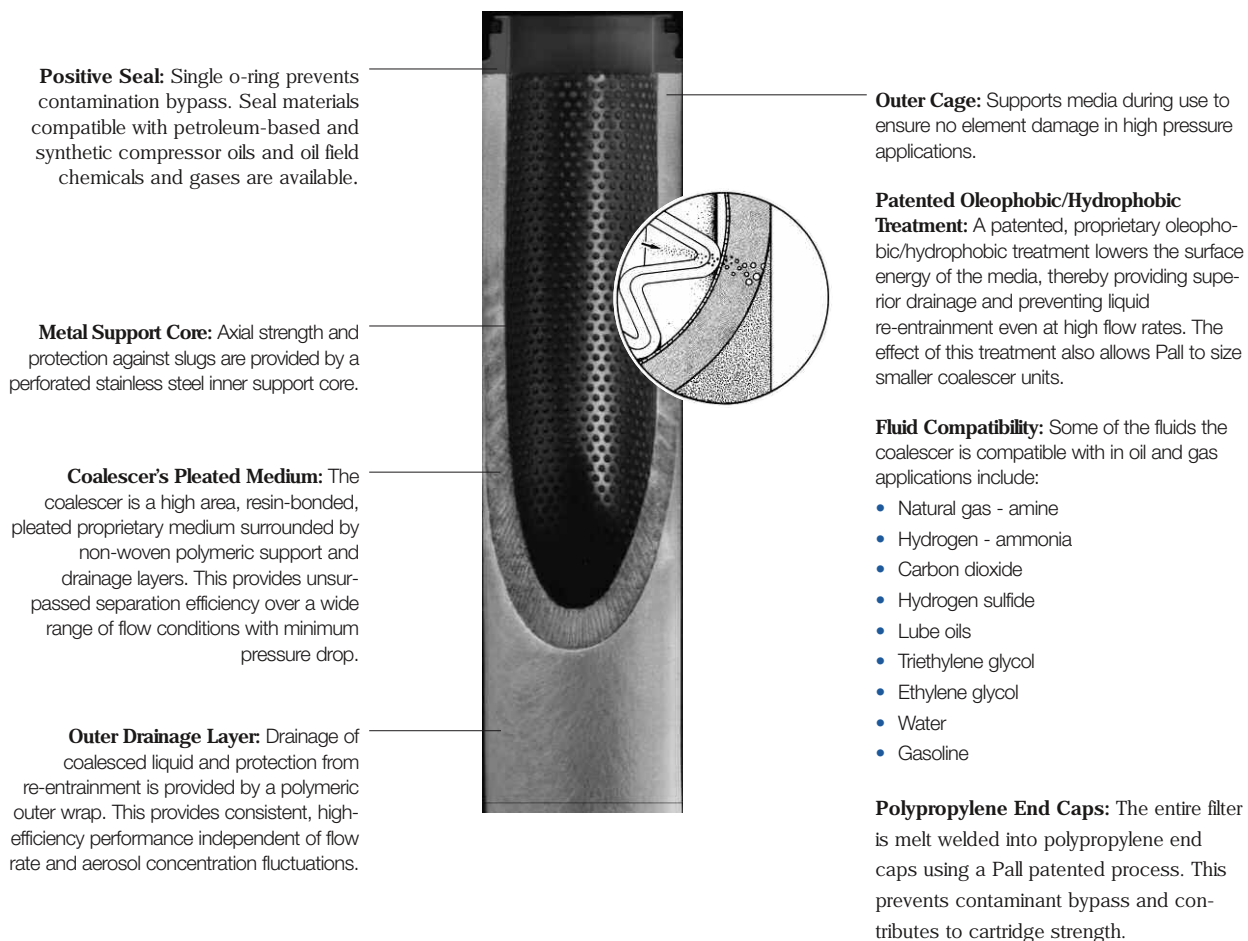

## Technical Information


### Nominal Cartridge Dimensions

Part Number	Outer Diameter (mm/in)	Length (mm/in)	Surface Area (m <sup>2</sup> /ft <sup>2</sup> )
CC3LGA7H13 <sup>3</sup>	70/2.75	762/30	0.88/9.5
CC3LGB7H13 <sup>4</sup>	70/2.75	762/30	0.88/9.5

### Performance Specification

Solid Removal Rating	0.3 µm (99.99%)
Temperature Rating	180°F (82°C) 150°F (65°C) with Water
Clean & Saturated Pressure Drop	Sized to your specification

**Figure 1: Effect of Pressure Drop on Compressor Operating Costs<sup>5</sup>**

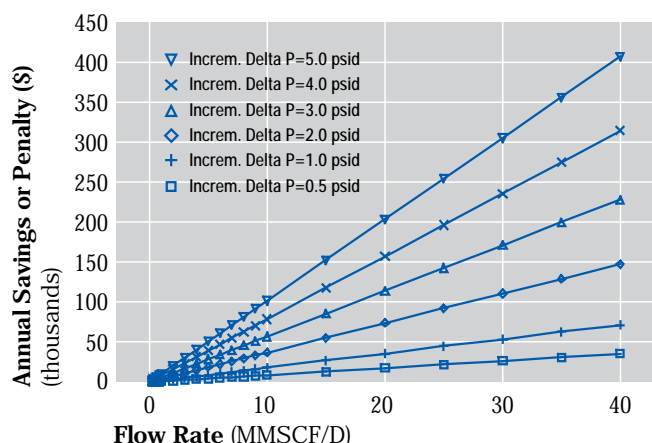

<sup>3</sup> CC3LGA can replace CC3LG7 in existing Pall coalescing housings.

<sup>4</sup> Completely compatible with amines and ammonia.

<sup>5</sup> Conditions: Delta P on inlet pressure  
Inlet Pressure = 20 psia  
Outlet Pressure = 200 psia  
Gas compressed is methane  
Costs based on \$0.07/kwhr

Pall Corporation applies a patented oleophobic/hydrophobic chemical treatment on all of its SeptraSol liquid/gas coalescers. This allows the coalescers to operate at a lower saturated pressure drop. As shown on Figure 1, a small difference in saturated pressure drop can result in significant savings in operating costs.

### About Coalescer Efficiency Ratings

The measurement of the efficiency and the pressure drop of a coalescer should reflect operating conditions. Many manufacturers of coalescers measure efficiency using the dioctyl phthalate (DOP) test. The DOP test was not originally designed to measure the performance of a coalescer under operating conditions seen in the oil and gas industry. Rather, the DOP test is performed under the following conditions:

- Measures only capture efficiency and does not indicate how much liquid is at the filter outlet. It is the outlet concentration, which will indicate whether downstream equipment and processes are vulnerable to damage.
- Measures only the percent removal of DOP aerosols that are 0.3 µm compared to a range of sizes normally seen in oil and gas applications.
- Measures the removal of DOP, a liquid not typically found in oil and gas applications.
- Performed under a vacuum, not typical of operating conditions.
- Performed on a dry coalescing element; the effectiveness of a coalescer should be measured when a coalescer is completely saturated.

Pall has developed a test called the Liquid Aerosol Separation Efficiency (LASE) Test to specially measure the performance of a coalescer under operating conditions. The table below compares the LASE and DOP tests. For further details on the LASE test, see Pall literature GAS-4300b, "Recent Developments in Performance Ratings of Gas/Liquid Coalescers."

### Pall LASE Test vs. Conventional DOP

	Pall LASE Test	DOP Test	LASE Advantage
<b>Efficiency Rating</b>	Measures ppmw of total downstream aerosol concentration	Measures only the capture efficiency of 0.3 µm DOP aerosols	Specifies performance based on total liquid removal
<b>Test Contaminant</b>	Polydispersed 20 wt. compressor lube oil (size range 0.1-1.0 µm)	Monodispersed dioctyl phthalate (size range at 0.3 µm only)	Closely simulates actual process contamination
<b>Downstream Contaminant Measurement</b>	Full flow membrane sampling of all size contaminants	Indirect light scattering of 0.3 µm contaminants	Directly measures the amount of all liquid downstream
<b>Pressure Conditions</b>	Performed under positive pressure conditions	Performed under vacuum	More closely reflects actual process pressure conditions
<b>Cartridge Condition</b>	Performed on a saturated cartridge	Performed on dry cartridge	Reflects actual process cartridge service
<b>Pressure Drop Measurement</b>	Measures operating saturated cartridge pressure drop	Measures dry cartridge pressure drop	Provides a more realistic service pressure drop



Pall Corporation

**United States**

25 Harbor Park Drive  
Port Washington, New York 11050  
+1 888 873 7255 (toll free in U.S. only)  
+1 516 484 3600 phone  
+1 516 484 0364 fax  
fuelsandchemicals@pall.com


**United Kingdom**

Europa House  
Havant Street  
Portsmouth  
PO1 3PD  
+44 (0) 23 9230 2357 phone  
+44 (0) 23 9230 2509 fax

*Filtration. Separation. Solution.<sup>SM</sup>*

**Visit us on the Web at [www.pall.com](http://www.pall.com)**

**Pall Corporation has offices and plants throughout the world in locations including:** Argentina, Australia, Austria, Belgium, Brazil, Canada, China, France, Germany, India, Indonesia, Ireland, Italy, Japan, Korea, Malaysia, Mexico, the Netherlands, New Zealand, Norway, Poland, Puerto Rico, Russia, Singapore, South Africa, Spain, Sweden, Switzerland, Taiwan, Thailand, United Arab Emirates, United Kingdom, United States, and Venezuela. Distributors are located in all major industrial areas of the world.

© Copyright 2007, Pall Corporation. Pall,  and Seprisol are trademarks of Pall Corporation. ® Indicates a Pall trademark registered in the USA. *Filtration. Separation. Solution.<sup>SM</sup>* is a service mark of Pall Corporation.

Reorder Code FCSEP7EN

11/07 • Printed in USA • 2M • ASP