

Ultipor N66 filter cartridges are specifically engineered for microbial stabilization of food and beverage products.

## Description

Ultipor N66 filters incorporate pleated nylon 6,6 media into single open ended (SOE) cartridges to fit in sanitary filter housings. These elements provide reliable, economical and efficient microbial stabilization for a broad range of food and beverage applications.

Ultipor N66 filters are suitable for exposure to repeated hot water and *in situ* steam sanitization cycles for longer service life.

## Features and Benefits

Features	Benefits
Hydrophilic media in multiple microbial retention ratings	<ul style="list-style-type: none"> <li>• Consistent filtrate quality</li> <li>• Targeted microbial stabilization of beverages and ingredients</li> <li>• Easy to wet and integrity test</li> </ul>
Cartridges resistant to numerous sanitization cycles produced with no adhesives or surfactants	<ul style="list-style-type: none"> <li>• Process reliability</li> <li>• Cost effective filtration</li> </ul>
Individually serialized cartridges	<ul style="list-style-type: none"> <li>• Full traceability</li> </ul>

## Quality

- Cartridges produced in a controlled environment
- Manufactured according to ISO 9001:2008 certified Quality Management System

## Food Contact Compliance

Please refer to the Pall website <http://www.pall.com/foodandbev> for a Declaration of Compliance to specific National Legislation and/or Regional Regulatory requirements for food contact use.

## Ultipor® N66 Filter Cartridges For Microbial Reduction and Retention



Ultipor N66 filter cartridges with nylon and polyester hardware

## Typical Applications

Grades	Applications
NF, NL and NA	Filtration of aqueous fluids (e.g. bottled water or ingredient solutions)
NB and NK	Filtration of bulk alcoholic fluids (e.g. wine and beer) or aqueous fluids (e.g. ingredient solutions)

## Materials of Construction

Filter Medium	Nylon with integral polyester non-woven substrate
Support and Drainage	Polyester
Cage, Core	Polypropylene
O-ring Seal	Ethylene Propylene Rubber or Silicone Elastomer

### For Part Numbers beginning with AB\_

End Cap and Fin End	Polyester
Adaptor	Polyester

### For Part Numbers beginning with ABN\_

End Cap and Fin End	Unpigmented Nylon 6-10
Adaptor	Unpigmented Nylon 6-10 with internal stainless steel reinforcing ring

## Technical Information

### Operating Characteristics in Compatible Fluids<sup>1</sup>

For Part Numbers beginning with ABN_	
Maximum continuous operating temperature	80 °C (176 °F)
Maximum Differential Pressure (forward)	Operating Temperature
5.4 bard (80 psid)	50 °C (122 °F)
4.0 bard (60 psid)	80 °C (176 °F)
2.1 bard (30 psid)	90 °C (194 °F)
300 mbard (4.4 psid)	140 °C (284 °F)
For Part Numbers beginning with AB_	
Maximum continuous operating temperature	60 °C (140 °F)
Maximum Differential Pressure (forward)	Operating Temperature
5.4 bard (80 psid)	50 °C (122 °F)
4.0 bard (60 psid)	80 °C (176 °F)
300 mbard (4.4 psid)	140 °C (284 °F)

<sup>1</sup> Compatible fluids are defined as those which do not swell, soften or attack any of the filter components.

### Sterilization and Sanitization

For Part Numbers beginning with ABN_		
Method	Temperature	Cumulative Time <sup>2</sup>
Hot water	80 - 85 °C (176 - 185 °F)	100 hours
Steam	110 °C (230 °F)	50 hours*
Steam	125 °C (257 °F)	16 hours*
Steam	140 °C (284 °F)	4 hours*
For Part Numbers beginning with AB_		
Method	Temperature	Cumulative Time
Steam	125 °C (257 °F)	16 hours*
Steam	140 °C (284 °F)	4 hours*

<sup>2</sup> Measured under laboratory test conditions. The actual cumulative time depends on the process conditions. For applications requiring Sterilization or Sanitization Pall recommends the use of Code 7 adaptors to ensure filter sealing after cooling. Cartridges should be cooled to system operating temperature prior to use. Contact Pall for recommended procedures.


\* Where indicated one hour sanitization cycles were utilized.

### Microbial Removal Rating in Liquid

The NF grade (2 media layers) provides a sterile effluent when challenged with *Brevundimonas diminuta* (ATCC19146) at a level of >10<sup>7</sup> CFU per cm<sup>2</sup> of effective filtration area. Microbial reduction data for specific applications may be available for other media grades, please contact your Pall representative for application specific information.

NA, NF and NL grades are recommended for filtration of water and aqueous fluids. NB and NK grades are recommended for filtration of bulk alcoholic beverages like wine and beer. All grades may be suitable for liquid ingredient filtration. Please contact Pall for assembly sizing based on your specific application.

### Typical Flow Rates<sup>3</sup>

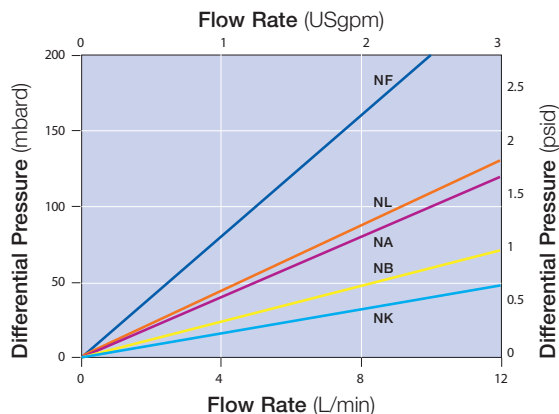

<sup>3</sup> Typical initial clean media differential pressure ( $\Delta P$ ) per 250 mm (10") cartridge for water at 20 °C (68 °F); viscosity 1 centipoise. For 508 mm, 762 mm and 1016 mm configurations divide the differential pressure by 2, 3, and 4 respectively.

### Ordering Information

This information is a guide to the part number structure and possible options. For availability of specific options and housing details, please contact Pall.

Part Number: AB  Table 1  Table 2  Table 3  Table 4  W  Table 6

AB N  Table 2  Table 3  7  Table 5  W  Table 6

Table 1 : Hardware Material

Code	Description
N*	Unpigmented Nylon 6-10
Blank	Polyester

\* Available only in Code 7 (Table 4)

Table 2 : Nominal Length

Code	Length
1	254 mm (10")
2	508 mm (20")
3	762 mm (30")
4	1016 mm (40")

Table 3 : Microbial Removal Rating

Code	Microbial removal rating ( $\mu\text{m}$ ) in Liquids	Membrane Layers
NA	0.2	1
NF	0.2	2
NB	0.45	1
NL	0.45	2
NK	0.65	1

Table 4 : Adaptor

Code	Description
3	SOE – single open end with flat closed end and external 222 O-rings, in polyester only
7	SOE – single open end with fin end, 2 locking tabs and external 226 O-rings
8	SOE – single open end with fin end and external 222 O-rings, in polyester only
28	SOE – single open end with fin end, 3 locking tabs and external 222 O-rings, in polyester only

(Code 3, 7, 8 and 28 may be available in selected grades, confirm code availability with your Pall representative)

Table 5 : Application

Code	Description
B*	For beer applications
Blank	For all other applications

\* Available in NB and NK only

Table 6 : O-ring Seal

Code	Description
H4	Silicone Elastomer
J	Ethylene Propylene Rubber



Pall Food and Beverage

25 Harbor Park Drive  
Port Washington, NY 11050  
+1 516 484 3600 telephone  
+1 866 905 7255 toll free US

Visit us on the Web at [www.pall.com/foodandbev](http://www.pall.com/foodandbev)

Pall Corporation has offices and plants throughout the world. For Pall representatives in your area, please go to [www.pall.com/contact](http://www.pall.com/contact)

Please contact Pall Corporation to verify that the product conforms to your national legislation and/or regional regulatory requirements for water and food contact use.

Because of technological developments related to the products, systems, and/or services described herein, the data and procedures are subject to change without notice. Please consult your Pall representative or visit [www.pall.com](http://www.pall.com) to verify that this information remains valid.

© Copyright 2011, Pall Corporation. Pall, and Ultipor are trademarks of Pall Corporation. ® Indicates a trademark registered in the USA. Filtration. Separation. Solution.<sup>SM</sup> is a service mark of Pall Corporation.