UltiFuzor™ 41110 Series Degas Modules



Data Sheet MEUDM4ENb

Description

The UltiFuzor™ UDM-41110 series degas module is the next generation development in Pall degassing technology. The UDM41110PT1 allows digital ink jet printers to achieve high DO removal at the lowest pressure drop, prevent bubble formation and assure optimal printer performance.

The compact design allows digital ink jet printers to meet flow rate requirements up to 300 mL/min. The UDM41110PT1 is ideal for digital textile printing applications.

Features and Benefits

- Compact size
- Low pressure drop
- High dissolved oxygen removal
- 1/8 in NPT, Female connections
- Unique hollow fiber technology
- Black housing for UV sensitve inks




Materials of Construction

Components	Materials
Housing	Polypropylene (Black)
Hollow Fiber	Polyethylene
Potting Compound	Epoxy Resin

Specifications


Flow Guidelines	0 – 300 mL / min
Typical Membrane Surface Area	0.28 m ² / 3.01 ft ²
Maximum Operating Temperature	45 °C / 113 °F
Maximum Operating Pressure	0.2 MPaG @ 45 °C / 30 psig @ 113 °F
Connections (Inlet / Outlet / Vacuum)	1/8" NPT, Female

Dimensions (Nominal)

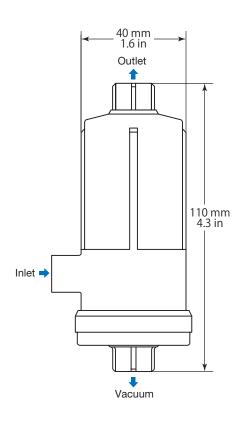

For best performance module should be Installed vertically.
For best performance module, ink should be Introduced Into the module slowly to eliminate any possibility of air being trapped in the module.

Flow Rate vs Pressure Drop (Water, 20 °C)1

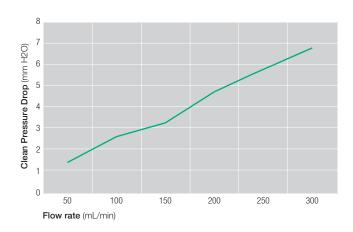


 $^{^{1}}$ For liquids with viscosity differing from water, multiply the pressure drop by the viscosity in mPa \cdot s.

Part Numbers / Ordering Information

Part Number: UDM-41110PT1

Dissolved Oxygen Removal vs Flow and Vacuum Level in Water

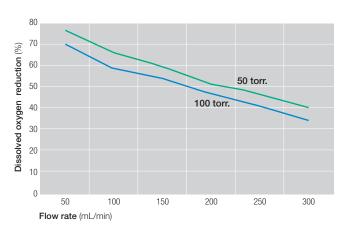

PALL PALL CORPORATION

Microelectronics

25 Harbor Park Drive Port Washington, NY 11050 +1 516 484 3600 telephone +1 800 360 7255 toll free US

Nihon Pall Ltd.

6-5-1, Nishishinjuku, Shinjuku-ku Tokyo 163-1325 Japan +81 3 6901 5700 telephone +81 3 5322 2109 fax Pall Corporation has offices and plants throughout the world. To locate the Pall office or distributor nearest you, visit www.pall.com/contact.

The information provided in this literature was reviewed for accuracy at the time of publication. Product data may be subject to change without notice. For current information consult your local Pall distributor or contact Pall directly.

IF APPLICABLE Please contact Pall Corporation to verify that the product conforms to your national legislation and/or regional regulatory requirements for water and food contact use.

© Copyright 2025, Pall Corporation. Pall, (PALL), and UltiFuzer are trademarks of Pall Corporation. ® Indicates a trademark registered in the USA.

