



DUO-FINE® 1401 Series Filter Cartridges

High Surface Area Pleated Filter Cartridges For Critical Applications

- Available in Retention Ratings of 0.45 to 50 microns (μm)
- Lifting Bail Provides Quick and Easy Cartridge Change Outs
- High Surface Area Provides Long Service Life
- Internal O-ring Seal Minimizes Contaminant Bypass
- Tin and Stainless Steel Hardware Provides Increased Mechanical Strength
- Manufactured Under ISO 9001 Quality System

Performance Specifications

Filter Grades:

0.45, 3, 10, 30, or 50 μm

Recommended Change Out Differential Pressure¹:
35 psid (2.4 bard)

Maximum Differential Pressure:
40 psid (2.8 bard) @ 200°F (93°C)

Maximum Operating Temperature:
250°F (121°C)

Product Specifications

Materials of Construction:

Filter Media:

50 μm : Polyester

All Other Grades: Borosilicate Microfiberglass with
Acrylic Binder

Support Material: Polyester

Core: Tin Plated Steel

End Caps: Stainless Steel

Outer Netting: Polypropylene

Sealing: Epoxy Bond


O-ring: Buna N

Dimensions (nominal):

Outside Diameter: 3 $\frac{3}{4}$ " (9.5 cm)

Inside Diameter: 2 $\frac{1}{8}$ " (5.4 cm)

Length: 38 $\frac{3}{4}$ " (98.4 cm)

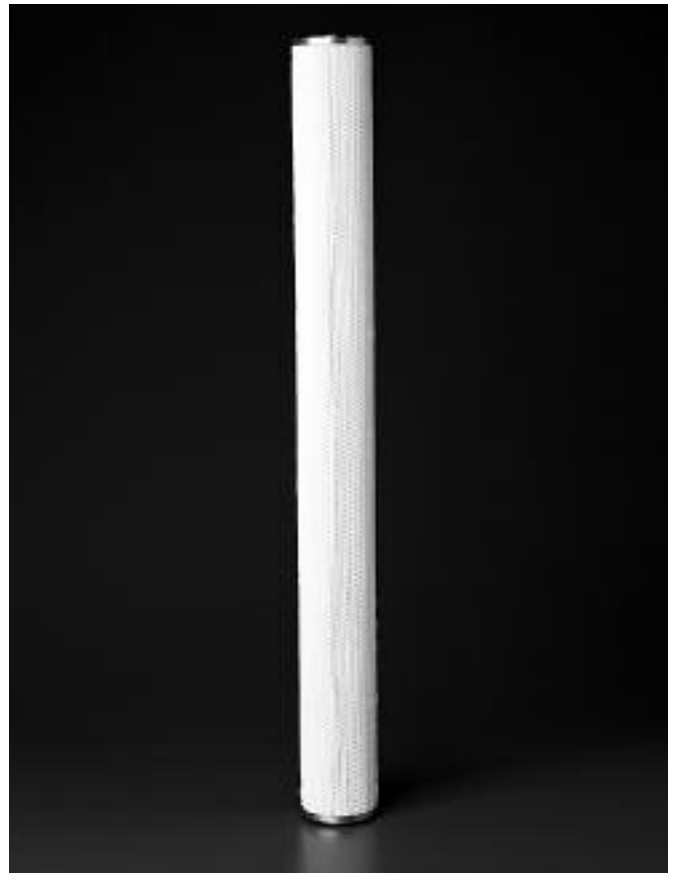

¹ - Provided that the maximum differential pressure is not exceeded based on temperature limits defined above.

Particle Retention (µm)

Cartridge Designation	Liquid Service (by ASTM F-795 Test)		Gas Service
	90% Efficiency	>99.9% Efficiency	Removal Efficiency by DOP Test
DFN 0.45	0.45	2	99.998%
DFN 3	3	10	————
DFN 10	10	18	————
DFN 30	30	45	————
DFN 50	50	75	————

Duo-Fine 1401 filter cartridges have been extensively laboratory and field tested to determine removal efficiencies in the most stringent of operating conditions.

The removal rating of any filtration device will depend, to some extent, on the conditions under which it is used or tested. The test results will be influenced by the nature of the fluid, its viscosity, the flow rate, the type of contaminant, and the temperature. The absolute ratings given above represent the diameter of the largest hard spherical particle that will pass through the filter under normal operating conditions. Contact Pall for a complete description of Pall's test procedures.

The DOP test measures the ability of the filter to capture fine particles in air or gas. The retention ratings given above represent the removal efficiencies with respect to an aerosol dispersion of 0.3 µm Dioctyl Phthalate (DOP) particles.

Part Numbers/Ordering Information

DFN ■ – 1401 (e.g., DFN 10-1401)

Code ■	Filter Grades
0.45	0.45 µm
3	3 µm
10	10 µm
30	30 µm
50	50 µm



Pall Corporation

2200 Northern Boulevard.
East Hills, New York 11548-1289

1.800.FILTERS toll free
516.484.5400 phone
516.484.3216 fax
www.pall.com web

Visit us on the Web at www.pall.com

Pall Corporation has offices and plants throughout the world in locations including: Argentina, Australia, Austria, Belgium, Brazil, Canada, China, France, Germany, India, Indonesia, Ireland, Italy, Japan, Korea, Malaysia, Mexico, the Netherlands, New Zealand, Norway, Poland, Puerto Rico, Russia, Singapore, South Africa, Spain, Sweden, Switzerland, Taiwan, Thailand, United Kingdom, United States, and Venezuela. Distributors are located in all major industrial areas of the world.