

Emflon® Filter



Description

The Emflon filter is recommended for chemicals which are compatible with PTFE and polypropylene.

- Wide range of configurations
- Five removal ratings
- High flow rates
- Integrity testable
- Low extractables
- Optimized design
- Manufactured in a cleanroom environment
- 100% integrity tested

Specifications

Materials

- Medium: PTFE
- Core, cage, and end caps: Polypropylene
- Support and drainage: Polypropylene
- O-ring options: Viton¹ and Teflon encapsulated Viton

Removal Ratings

- 5.0 µm, 1.0 µm, 0.2 µm, 0.1 µm, 0.05 µm

Filter Areas

- 10" / 254 mm: 9.45 ft² / 0.88 m²
- 20" / 508 mm: 18.90 ft² / 1.76 m²
- 30" / 762 mm: 28.35 ft² / 2.64 m²
- 40" / 1016 mm: 37.80 ft² / 3.52 m²

Configurations

- Nominal length: 10" / 254 mm, 20" / 508 mm, 30" / 762 mm, and 40" / 1016 mm
- Diameter: 2.75" / 70 mm
- O-ring size / end caps:
 - Code 3 (222 double O-ring / flat end)
 - Code 8 (222 double O-ring / finned end)
 - Code 7 (226 double O-ring bayonet lock / finned end)

Operating Conditions

- Maximum Operating Temperature: 194°F / 90°C
- Maximum Forward Differential Pressure:
 - 80 psid @ 120°F / 5.5 bar @ 50°C;
 - 50 psid @ 121° - 195°F / 3.5 bar @ 51° - 90°C


Integrity Test Values²

- Per 10" / 254 mm segment
- 0.05 µm: < 45 mL / min @ 35 psig / 2.4 bar
 - 0.1 µm: < 64 mL / min @ 19 psig / 1.3 bar
 - 0.2 µm: < 32 mL / min @ 11 psig / 0.76 bar

¹ Viton and Teflon are trademarks of DuPont Dow Elastomers

² Test fluid used is 60:40, IPA:H₂O.

Pressure Drop vs. Liquid Flow Rate³

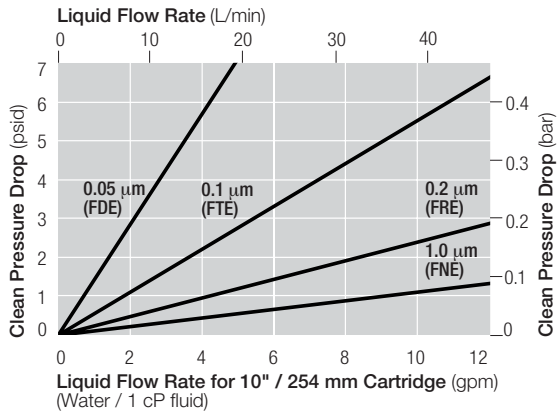

³ For liquids with viscosity differing from water, multiply the pressure drop by the viscosity in centipoise.

Cartridge Style AB1

Part Numbers / Ordering Information

Part Number ⁴	Removal Rating (μm)	Nominal Length (in / mm)	Configuration Code	O-Ring Material ⁵
AB1FC8EJ	5.0	10 / 254	8	Ethylene Propylene
AB1FN3EH1	1.0	10 / 254	3	Teflon Encapsulated Viton
AB1FN3EHF	1.0	10 / 254	3	Viton A
AB1FR3EH1	0.2	10 / 254	3	Teflon Encapsulated Viton
AB1FR3EHF	0.2	10 / 254	3	Viton A
AB1FR7EH1	0.2	10 / 254	7	Teflon Encapsulated Viton
AB1FR8EH1	0.2	10 / 254	8	Teflon Encapsulated Viton
AB1FR8EHF	0.2	10 / 254	8	Viton A
AB2FR3EH1	0.2	20 / 508	3	Teflon Encapsulated Viton
AB2FR3EHF	0.2	20 / 508	3	Viton A
AB2FR8EHF	0.2	20 / 508	8	Viton A
AB3FR3EH1	0.2	30 / 762	3	Teflon Encapsulated Viton
AB1FT3EH1	0.1	10 / 254	3	Teflon Encapsulated Viton
AB1FT3EHF	0.1	10 / 254	3	Viton A
AB2FT3EH1	0.1	20 / 508	3	Teflon Encapsulated Viton
AB3FT3EH1	0.1	30 / 762	3	Teflon Encapsulated Viton
AB1FD8EH1	0.05	10 / 254	8	Teflon Encapsulated Viton
AB2FD3EH1	0.05	20 / 508	3	Teflon Encapsulated Viton
AB3FD3EH1	0.05	30 / 762	3	Teflon Encapsulated Viton

⁴ For prewet option add -K3 to end of part number.

⁵ Other O-ring materials are available.

Unit conversion: 1 bar = 100 kilopascals



2200 Northern Boulevard
East Hills, New York 11548-1289 USA

1.800.360.7255 toll free (Only in US)
1.516.484.5400 phone
1.516.625.3610 fax

Filtration. Separation. Solution.SM

Visit us on the Web at www.pall.com/micro

Pall Corporation has offices and plants throughout the world in locations including: Argentina, Australia, Austria, Belgium, Brazil, Canada, China, France, Germany, Hong Kong, India, Indonesia, Ireland, Italy, Japan, Korea, Malaysia, Mexico, the Netherlands, New Zealand, Norway, Poland, Puerto Rico, Russia, Singapore, South Africa, Spain, Sweden, Switzerland, Taiwan, Thailand, United Kingdom, United States, and Venezuela. Distributors are located in all major industrial areas of the world.

© Copyright 2004, Pall Corporation. Pall, are trademarks of Pall Corporation. ® Indicates a Pall trademark registered in the USA. Filtration. Separation. Solution.SM is a service mark of Pall Corporation.